

HP StorageWorks

Q2300 PCI-X host bus adapter for Itanium Linux systems installation guide

Part number: AA-RW7HA-TE
First edition: March 2005



Legal and notice information

© Copyright 2005 Hewlett-Packard Development Company, L.P.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information is provided "as is" without warranty of any kind and is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Itanium™ is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Linux® is a U.S. registered trademark of Linus Torvalds.

Q2300 PCI-X host bus adapter for Itanium Linux systems installation guide

Contents

About this guide	5
Intended audience	5
Related documentation	5
Document conventions and symbols	6
HP technical support	7
HP-authorized reseller	7
Helpful web sites	7
1 Q2300 HBA features.	9
Performance specifications.	10
Environmental specifications	10
Physical specifications.	11
2 Installing the HBA	13
Installation prerequisites	13
HBA components	14
LED indicators	15
Jumpers	15
Before you begin installation	16
Installing the HBA	16
3 Upgrading the HBA EFI driver and RISC firmware on Linux systems	17
Upgrading the HBA on Linux systems	18
4 Installing the Linux driver	19
Installing the driver kit	20
Using the RPM to install drivers	20
Installing the RPM	20
Upgrading the RPM	20
Uninstalling the RPM	20
Installing the fibreutils RPM	21
Changing driver parameters	21
Building a driver from the sources	21
Building a uniprocessor version of the driver	22
Building a multiprocessor version of the driver	22
Installing the driver on the boot drive	24
Loading the driver	24
Building a ramdisk image to load the qla2300 driver	25
Loading and unloading the qla2300 driver manually	26
Additional driver information	27
System driver parameter max_scsi_luns	27
Driver command line parameters	28
Proc file system support	28

A	Configuring the HBA	29
	Starting the Configuration protocol	29
	Using the Driver Configuration menu	29
B	Regulatory compliance and safety	33
	Laser device	33
	Laser safety warning	33
	Certification and classification information	33
	Laser product label	33
	International notices and statements	34
	Canadian notice (avis Canadien)	34
	Class A equipment	34
	European Union notice	34
	BSMI notice	35
	Japanese notice	35
	Korean notices	36
	Safety	36
	Electrostatic discharge	36
	Preventing electrostatic damage	36
	Grounding methods	37
	Index	39

Figures

1	Q2300 HBA	14
2	Class 1 laser product label	33

Tables

1	Document conventions	6
2	HBA environmental specifications	10
3	HBA specifications	11
4	LED indicators activity	15
5	Driver Configuration menu components	31

About this guide

This guide describes how to install, configure, and troubleshoot the HP StorageWorks Q2300 PCI-X host bus adapter (Q2300 HBA), part number A7538A, for Itanium™ Linux® operating systems.

For the latest version of this document and other HBA documentation, access the HP storage web site <http://h18006.www1.hp.com/storage/saninfrastructure.html>.

Intended audience

This guide is intended for system administrators who are experienced with the following:

- Linux operating system
- Host bus adapters (HBAs)

Related documentation

In addition to this guide, please refer to the *HP StorageWorks Q2300 PCI-X host bus adapter for Itanium Linux systems release notes*.

These and other HP documents can be found on the HP web site <http://www.docs.hp.com>.

Document conventions and symbols

Table 1 Document conventions

Convention	Element
Medium blue text: Figure 1	Cross-reference links and e-mail addresses
Medium blue, underlined text (http://www.hp.com)	Web site addresses
Bold font	<ul style="list-style-type: none">• Key names• Text typed into a GUI element, such as into a box• GUI elements that are clicked or selected, such as menu and list items, buttons, and check boxes
<i>Italics font</i>	Text emphasis
Monospace font	<ul style="list-style-type: none">• File and directory names• System output• Code• Text typed at the command-line
<i>Monospace, italic font</i>	<ul style="list-style-type: none">• Code variables• Command-line variables
Monospace, bold font	Emphasis of file and directory names, system output, code, and text typed at the command-line



WARNING! Indicates that failure to follow directions could result in bodily harm or death.



CAUTION: Indicates that failure to follow directions could result in damage to equipment or data.



IMPORTANT: Provides clarifying information or specific instructions.



NOTE: Provides additional information.



TIP: Provides helpful hints and shortcuts.

HP technical support

Telephone numbers for worldwide technical support are listed on the HP web site:

<http://www.hp.com/support>.

Collect the following information before calling:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Operating system type and revision level
- Detailed, specific questions

For continuous quality improvement, calls may be recorded or monitored.

HP strongly recommends that customers sign up online using the Subscriber's choice web site

<http://www.hp.com/go/e-updates>.

- Subscribing to this service provides you with e-mail updates on the latest product enhancements, newest versions of drivers, and firmware documentation updates as well as instant access to numerous other product resources.
- After signing up, you can quickly locate your products by selecting **Business support** and then **Storage** under Product Category.

HP-authorized reseller

For the name of your nearest HP-authorized reseller:

- In the United States, call 1-800-345-1518.
- Elsewhere, visit <http://www.hp.com> and click **Contact HP** to find locations and telephone numbers.

Helpful web sites

For product information, see the following web sites:

- <http://www.hp.com>
- <http://www.hp.com/go/storage>
- <http://www.hp.com/support/>
- <http://www.docs.hp.com>

1 Q2300 HBA features

This chapter describes the features of the Q2300 HBA (part number A7538A), including:

- [Performance specifications](#), page 10
- [Environmental specifications](#), page 10
- [Physical specifications](#), page 11

Performance specifications

The Q2300 HBA is a 2-Gb, high-performance Direct Memory Access (DMA) bus master host adapter designed for high-end systems.

This HBA has the following features:

- Unique, single-integrated Fibre Channel controller for added reliability and optimum performance.
- Autonegotiation of Fibre Channel speed bit rate (1 Gbps or 2 Gbps).
- Combines a powerful Reduced Instruction Set Computing (RISC) processor, a Fibre Channel protocol manager (FPM) with 2-Gb Fibre Channel transceivers, and a peripheral component interconnect (PCI) or peripheral component interconnect-extended (PCI-X) local bus interface in a single-chip solution.
- Supports Private Loop Direct Attach (PLDA) and Fabric Loop Attach (FLA) connections.
- Supports bus master DMA.
- Supports Fibre Channel protocol-SCSI (FCP-SCSI), IP, and Fibre Channel-Virtual Interface (FC-VI) protocols.
- Supports point-to-point fabric connection (F-PORT FABRIC LOGIN).
- Complies with:
 - PCI Local Bus Specification revision 2.2.
 - PCI-X Addendum (revision 1.0) to the PCI Local Bus Specification.
 - Third-generation Fibre Channel–Physical and Signaling Interface (FC-PH-3) standard.
 - Fibre Channel-Arbitrated Loop (FC-AL-2) standard.
 - U.S. and international safety and emissions standards.

Environmental specifications

Table 2 lists the HBA environmental specifications.

Table 2 HBA environmental specifications

Environment	Minimum	Maximum
Operating temperature	0°C/32°F	55°C/131°F
Storage temperature	–2°C/–4°F	70°C/158°F
Relative humidity (non-condensing)	10%	90%
Storage humidity (non-condensing)	5%	95%

Physical specifications

Table 3 lists the HBA specifications.

Table 3 HBA specifications

Type	Specification
Host bus	Conforms to <i>PCI Local Bus Specification</i> , Revision 2.2
Fibre Channel specifications	Bus type: fiber optic media Bus transfer rate: 200 Mb/s maximum at half duplex 400 Mb/s maximum at full duplex Interface chip: ISP2312
Central processing unit (CPU)	Single-chip design that includes a RISC processor, Fibre Channel protocol manager, PCI-XDMA controller, integrated serializer/deserializer (SEREDES), and electrical transceivers that can auto-negotiate a data rate of 1 Gb/s or 2 Gb/s
RAM	256 KB per Fiber Channel controller; scalable to 4 MB
NVRAM	256 KB, field programmable
Flash	128 KB of flash ROM in two 64 KB, software selectable banks, field programmable
Onboard DMA	Five-channel DMA controller: two data and one command, one auto-DMA request, and one auto-DMA response
Distance	1 Gbps: 500 meters 50/125 μ m fiber, 300 meters 62.5/125 μ m fiber 2 Gbps: 300 meters 50/125 μ m fiber, 150 meters 62.5/125 μ m fiber
Cable	50/125 μ m multimode fiber, 62.5/125 μ m multimode fiber
Frame Buffers	Integrated 10 KB frame buffer FIFOs (6 KB receive and 4KB transmit) for each data channel
Connectors	LC-style connector that supports non-OFC, multimode fiber optic cabling using a small form factor optical transceiver module.
Form factor	17.78 cm x 10.67 cm (7.0 in x 4.2 in)
Power Consumption (66MHz PCI-X Optic)	~4.75 watts

2 Installing the HBA

This chapter describes the procedure for installing the Q2300 HBA, including:

- [Installation prerequisites](#), page 13
- [Installing the HBA](#), page 16

Refer to your host documentation for installing the HBA.

⚠ WARNING! Disconnect the host from the power source before installing the HBA. To reduce the risk of personal injury from hot surfaces, allow the internal server or workstation components to cool before touching.

⚠ WARNING! Electrostatic discharge (ESD) can damage electronic components. Be sure you are properly grounded before beginning this procedure as described in "[Regulatory compliance and safety](#)" on page 33

Installation prerequisites

Before you begin, make sure you have the following:

- A screwdriver (Phillips #1).
- An optical multimode cable with an LC-style duplex connector.
- Each HBA has a unique serial number that is located on the bottom of the adapter. Check the HBA and record its serial number, in the unlikely event that the NVRAM is corrupted.

HBA components

Figure 1 shows the Q2300 HBA LEDs that are referenced in this chapter.

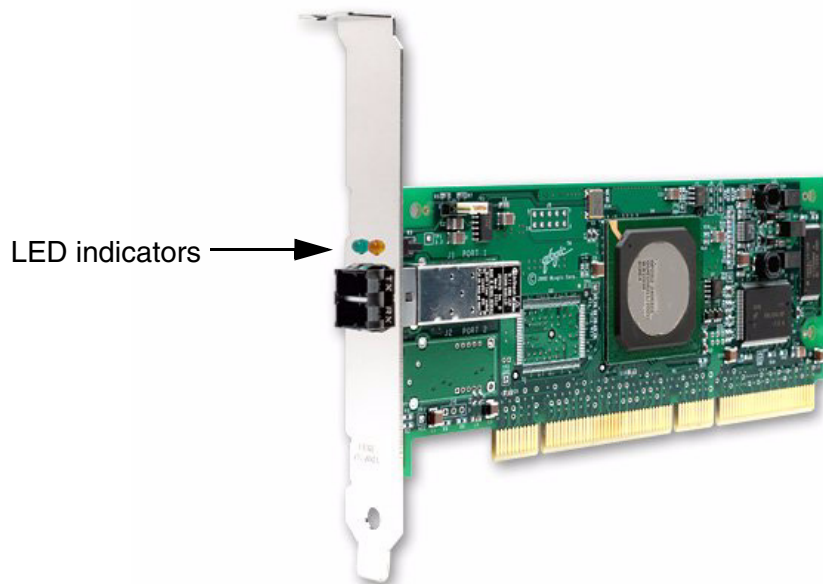


Figure 1 Q2300 HBA

LED indicators

Table 4 identifies and describes the activity of the LED indicators.

Table 4 LED indicators activity

Green LED (2Gb)	Amber LED (1 Gb)	Comments	Activity
Off	Off		Power off
On	On		Power on before firmware initialization
1 Flash	1 Flash	Both flashing at the same time like a heart beat	Power on after firmware initialization
2 Flashes	2 Flashes	Alternate flashing. This state changes to not- initialized state in 2 to 3 seconds. Both LEDs are On steadily	Firmware fault
Off	On		1 Gb Link up
On	Off		2 Gb Link up
Off	5 Flashes		Activity at 1Gb
5 Flashes	Off		Activity at 2 Gb

Jumpers

The jumpers on the HBA are set to the default state of the laser and are set at the factory with a jumper plug on pins 1-2 of the J3 jumper and on pins 1-2 of the J4 jumper.

△ **CAUTION:** Changing the jumper settings can result in the HBA being inoperable.

Before you begin installation

The HBA is self-configuring. However, some motherboards require manual configuration. See the documentation supplied with your computer, or contact your computer dealer to determine if your motherboard requires configuration.

Some motherboards have two kinds of PCI bus slots: master and slave. The Q2300 HBA must be in a PCI bus master slot. (Some motherboards have PCI bus master slots that are shared with onboard devices. The Q2300 HBA does not work in shared slots.)

PCI connectors vary among system adapter manufacturers. The Q2300 HBA is a 64-bit PCI device that can function in a 32-bit PCI slot; the slot conforms to the PCI specification. The rear edge of the PCI slot is notched.

△ **CAUTION:** If you try to install the adapter in a PCI slot that does not conform to the PCI specification, you may damage the device.

PCI and PCI-X slots look the same. If the server contains both PCI and PCI-X slots, refer to the server manufacturer's instructions to determine the slot type.

The Q2300 HBA is designed and tested to operate at PCI bus speeds of up to 133 MHz.

Installing the HBA

To install the HBA:

1. Check the motherboard and make any necessary configuration changes to accommodate the HBA.
2. Power down the peripherals, then turn off the computer.
3. Remove the computer cover and save the screws.
4. Choose any PCI bus slot that supports bus mastering.
5. Most motherboards automatically assign an IRQ level and interrupt line; if your motherboard does not, you must assign the IRQ level and use **interrupt line A** for the selected slot.
6. Remove the slot cover for the slot in which you will install the HBA.
7. Place the HBA in the slot. Carefully press the board into the slot until it seats firmly.
8. Secure the HBA to the chassis following the server manufacturer's instructions.
9. Connect the appropriate cable from the devices to the corresponding LC-connector.
10. Carefully reinstall the computer cover. Insert and tighten the computer cover screws.
11. Power up all external FC devices, then power up the server and observe the monitor to ensure proper operation.

3 Upgrading the HBA EFI driver and RISC firmware on Linux systems

This chapter describes the procedure for upgrading the Extensible Firmware Interface (EFI) driver and RISC firmware for the Q2300 HBA.

Upgrading the HBA on Linux systems

Use the following procedure to upgrade the Q2300 HBA on Linux:

1. Place the Q2300 HBA in a Linux server with a local boot disk.
2. Boot to Linux.
3. Load the fibreutils RPM.
4. Reboot the server to the EFI shell.
5. Set the drive to the boot device. For example, fs1:
6. Change to the directory containing EFIUTIL. For example:
`cd \efi\qla2x00`
7. Enter `efiutil.efi` to run EFIUTIL.
8. Enter the `adapter` command to select the first adapter channel.
9. Enter the `risc_fw_write` command to write the risc firmware. Use the default firmware file.
10. Enter the `efi_write` command to write the EFI driver. Use the default driver file.
11. Repeat [step 8](#) through [step 10](#) for other adapter channels.
12. Choose **quit** to exit EFIUTIL.
13. Enter the `reset` command to reboot.

4 Installing the Linux driver

This chapter provides instructions for installing the Linux qla2x00 drivers for the Q2300 HBA on an already installed Red Hat Enterprise Linux (Red Hat EL), kernel 2.4x, or SUSE Linux Enterprise Server (SUSE SLES) for 64-bit Itanium system.

The software kit for this HBA can be obtained from the following HP web site
<http://h18006.www1.hp.com/storage/saninfrastructure.html>.

This section provides instructions for installing the qla2300 driver into a Linux operating system.


To install the driver, you must be familiar with the operating system under which the HBA is to operate, and have access to standard system documentation.

To install the driver, use the procedures and information in the following sections:

- [Installing the driver kit](#), page 20
- [Building a driver from the sources](#), page 21
- [Installing the driver on the boot drive](#), page 24
- [Loading the driver](#), page 24
- [System driver parameter max_scsi_luns](#), page 27
- [Driver command line parameters](#), page 28
- [Proc file system support](#), page 28

Installing the driver kit

HP recommends that you install the complete driver kit for this HBA. The kit contains the driver and utilities you need to deploy this HBA on Linux.

 **NOTE:** You must install the gcc compiler and the kernel sources on your system before installing the driver kit.

To install the complete HP driver kit, copy the .gz file to your system and enter the following commands:

```
# gunzip hp_qla2x00version_info.tar.gz
# tar -xvf hp_qla2x00version_info.tar
# cd hp_qla2x00
# ./INSTALL
```

Refer to the README file included with the driver kit for more information.

Using the RPM to install drivers

The RPM Package Manager (RPM) is a package management system that lets you easily install Linux software. Using RPM, you can install software in prebuilt bundles called RPM packages. The driver RPM packages have the driver source code and driver utilities.

Installing the RPM

To install the RPM, copy the RPM package file to your system and enter the following command:

```
# rpm -ivh package_name.rpm
```

To manually install the Linux HBA driver RPM, enter the following command:

```
# rpm -ivh hp_qla2x00-version_info.rpm
```

Upgrading the RPM

To upgrade the RPM, copy the RPM package file to your system and enter the following command:

- For Red Hat EL, enter:

```
# rpm -Uvh --nopostun --nopreun package_name.rpm
```
- For SUSE SLES:

```
# rpm -Uvh package_name.rpm
```

Uninstalling the RPM

To uninstall the RPM package, enter the following command:

```
# rpm -e package_name.rpm
```

Installing the fibreutils RPM

HP recommends installing the fibreutils RPM found in the driver kit. It contains useful utilities for managing fibre-attached storage. To manually install this RPM, enter the following command:


```
# rpm -ivh fibreutils-version.rpm
```

For more information about fibreutils, refer to the file `/opt/hp/hp_fibreutils/README`.


Changing driver parameters

To change driver parameters:


1. Run the `set_parm` script located in the `/opt/hp/src...` directory.
2. Reboot the server.

 **NOTE:** You must reboot. Otherwise, you may not be able to unload the qla2200 and/or qla2300 drivers if there is a process or file system using a device that is attached to the Q2300 HBA.

Building a driver from the sources

 **IMPORTANT:** The following instructions are for reference only. Use these instructions only if the driver was not installed from the driver kit or from the HP driver RPM.

To build a single-processor version of the qla2300 driver, see the section "[Building a uniprocessor version of the driver](#)" on page 22. To build a symmetric multiprocessor (SMP) version of the qla2300 driver, see the section "[Building a multiprocessor version of the driver](#)" on page 22.

 **NOTE:** You need the gcc compiler installed on your system. If it is not installed, install it now.

Building a uniprocessor version of the driver

Perform the following steps to build a uniprocessor version of the qla2300 driver:

1. If not already installed, load the kernel-header and kernel-source RPM files from your Linux CD-ROM. For example:

```
# cd /mnt/cdrom/RedHat/RPMS
# rpm -iv kernel-headers*.rpm
# rpm -iv kernel-source*.rpm
```

2. Locate the driver source files:

- If you installed the driver kit or the driver RPM, the driver source files reside at `/opt/hp/...`
- If you copied your drivers from other media, copy the `qla2x00src-xx.xx.tgz` file to the `/home/qla2x00` directory. For example, if you copied the driver source file to a CD-ROM, enter:

```
# cd /home
# mkdir qla2x00
# cd /home/qla2x00
# cp /mnt/cdrom/qla* . (The period [.] at the end is required.)
# tar -xvzf qla*.tgz
```

3. Build the qla2300 driver from the sources:

- For Red Hat EL, enter:

```
# make
```

- For SUSE SLES, enter:

```
# make OSVER=linux
```

Building a multiprocessor version of the driver

Perform the following steps to build an SMP version of the qla2300 driver:

1. If not already installed, extract the kernel-header and kernel-source RPM files from your Linux CD-ROM distribution. For example:

```
# cd /mnt/cdrom/RedHat/RPMS
# rpm -iv kernel-headers*.rpm
# rpm -iv kernel-source*.rpm
```

2. Change to the Linux source directory.

- For Red Hat EL, enter:

```
# cd /usr/src/linux-2.4
```

- For SUSE SLES, enter:

```
# cd /usr/src/linux
```

3. At the command prompt, enter the following:

```
# make menuconfig
```

- a. Select **Processor type and features**, and then press **Enter**.
The Processor Type and Features menu appears.
- b. Select **Symmetric Multiprocessor**, and then press **Spacebar**.
- c. Click **Exit**.

The system prompts:

```
Do you wish to save your new kernel configuration?
```

d. Click **Yes**.

The system saves a new config file in the current directory.

4. At the command prompt, enter the following:

```
# make dep
```

5. Locate the source files:

- If you installed the driver RPM, the driver source files reside in `/opt/hp/...`
- If you copied your drivers from other media, copy the `qla2x00src-vx.xx.tgz` file to the `home/qla2x00` directory. For example, if you copied the driver source file on to a CD-ROM, enter:

```
# cd /home
# mkdir qla2x00
# cd /home/qla2x00
# cp /mnt/cdrom/qla* . (The period [.] at the end is required.)
# tar -xvzf qla*.tgz
```

6. Build the qla2300 driver from the sources:


- For Red Hat EL, enter:

```
# make SMP=1
```

- For SUSE SLES, enter:

```
# make SMP=1 OSVER=linux
```

Installing the driver on the boot drive

 **NOTE:** The following instructions for manually installing the driver and loading and unloading the driver are required only if the driver has been manually built from source. If the driver was installed from an HP driver RPM or driver kit, the driver loads at boot time.

Before manually installing the driver, note the following:

- The Q2300 HBA must be installed in the system *before* installing the qla2300 driver.
- The `kernel_release_version` is the Linux kernel release version of your system.
- In the following examples, the path to your driver may be:

`/lib/modules/kernel_release_version/kernel/drivers/addon/...`

Perform the following steps to install the qla2300 driver on the boot drive:

1. Build the driver binary file.

To build a driver binary from source files, see the section [“Building a driver from the sources”](#) on page 21.

2. Copy the `qla2300.o` binary file to the following directory:

`/lib/modules/kernel_release_version/kernel/drivers/scsi`

3. At the command prompt, enter the following command to update the module dependency:

```
# depmod -a
```

The qla2300 driver is now installed. However, the driver must be loaded before the system can access the devices attached to the HBA.

Loading the driver

The qla2300 driver must be loaded before the system can access the devices attached to the Q2300 HBA.


- To build a ramdisk image to automatically load the qla2300 driver at boot time, see [“Building a ramdisk image to load the qla2300 driver”](#) on page 25.
- To load the qla2300 driver manually, see [“Loading and unloading the qla2300 driver manually”](#) on page 26.

Building a ramdisk image to load the qla2300 driver

You can load the qla2300 driver at boot time using a ramdisk image as shown in this Red Hat EL example.


1. For Red Hat EL, add the following line to the file `/etc/modules.conf`:

```
alias scsi_hostadapter qla2300
```

 **NOTE:** If there are other SCSI host adapter boards installed on your system and the `scsi_hostadapter` alias is used, define a different alias (for example, `scsi_hostadapter n`. The *n* is a number in the range 1 to 9).

2. Build a new ramdisk image that contains the `qla2300.o` object file.

You must copy the driver binary file `qla2300.o` to
`/lib/modules/kernel_release_version/drivers/scsi`.

 **NOTE:** The `kernel_release_version` is the Linux kernel release version of your system.

3. Add the dependency for the qla2300 driver and build the ramdisk image:

You can either run `depmod -a` or make sure the following line is in the
`/lib/modules/kernel_release_version/modules.dep` file:

```
/lib/modules/kernel_release_version/kernel/drivers/scsi/  
qla2300.o: /lib/modules/kernel_release_version/kernel/  
drivers/scsi/scsi_mod.o
```

4. Build the ramdisk image file:

- For a single-processor system, enter the following command, replacing `x.x.xx-x.x` with your Linux version number:

```
/sbin/mkinitrd /boot/newinitrd-image x.x.xx-x.x
```

- For a multiprocessor system, enter the following command, replacing `x.x.xx-x.x` with your Linux version number.

```
/sbin/mkinitrd /boot/newinitrd-image x.x.xx-x.xsmp
```

5. Configure the boot loader with the new ramdisk image:

- a. Modify the `elilo.conf` file to load the new ramdisk image by changing the following line:

```
initrd=/boot/initrd_file_name
```

For example:

```
initrd=/boot/newinitrd-image
```

- b. Reboot the system.
- c. Select the kernel with the new ramdisk image.

Loading and unloading the qla2300 driver manually

Before loading the driver manually, first build the driver from sources as described in “[Building a uniprocessor version of the driver](#)” on page 22 or in “[Building a multiprocessor version of the driver](#)” on page 22.

After manually loading the qla2300 driver, you can access the devices and unload the driver manually without rebooting the system. The driver is also unloaded each time the system is rebooted.

To load the qla2300 driver:

1. Manually install the driver binary:

- a. Copy `qla2300.o` to the following directory:

```
/lib/modules/kernel_release_version/kernel/drivers/scsi
```

- b. Update the dependency file.


Either run `depmod -a` or make sure that the following line is in the file

```
/lib/modules/kernel_release_version/modules.dep:
```

```
/lib/modules/kernel_release_version/kernel/drivers/scsi/  
qla2300.o:/lib/modules/kernel_release_version/kernel/drivers/scsi/scsi_m  
od.o
```

c. Load the driver:

```
# modprobe qla2300
```

 **NOTE:** HP recommends loading the driver using the `modprobe` command so that any driver parameter value specified in the `/etc/modules.conf` file takes effect.

Alternatively, you can load the driver by entering the following command in the directory that contains the `qla2300.o` file:

```
# insmod qla2300.o
```

d. If your system has a previous version of the `qla` driver, rename the old binary included in the original distribution to ensure that it does not interfere with the updated version as follows:

```
# cd /lib/modules/kernel_release_version/kernel/
drivers/addon/qla2300
# mv qla2300.o qla2300_rh.o
```

e. After renaming the older driver version, load the new driver using `modprobe` after updating the dependency file.

2. To manually unload the `qla2x00` driver, enter the following command as shown in the following example:

```
# modprobe -r qla2300
```

Additional driver information

System driver parameter `max_scsi_luns`

You can configure support for multiple LUNs in one of three ways. Currently, the maximum number of LUNs that can be scanned for each device is 128.



NOTE: If you have multiple HBAs, set `max_scsi_luns` to the largest number of LUNs supported by any one of these HBAs.

- To configure multiple LUN support during boot time, enter the following command at the boot prompt:

```
boot: linux max_scsi_luns=128
```

- If the SCSI Mid-Layer is compiled as a module, add the following line to the `/etc/modules.conf` file to scan for multiple LUNs at each boot:

```
options scsi_mod max_scsi_luns=128
```
- If the SCSI Mid-Layer is not compiled as a module, you can configure the boot loader to scan for multiple LUNs each time the system boots.
- To complete the configuration, perform the following steps:
 1. Add the following line to each of the kernel images listed in the `elilo.conf` file:

```
append="max_scsi_luns=128"
```
 2. Reboot the system.

Driver command line parameters

The following command line options are available:

- **Verbose**—This option provides detailed debug information. For example:

```
# insmod qla2300.o options=verbose
Waiting for LIP to complete....
scsi%d: Topology - %s, Host Loop address 0x%x
scsi(%d): LIP occurred
scsi(%d): LIP reset occurred
```

- **Quiet**—This option keeps the driver from displaying. For example:


```
# insmod qla2300.o ql2xopts=quiet
```

Proc file system support

The `/proc` file system for the `qla2300` driver can be found in the `/proc/scsi/qla2300/` directory. This directory contains entries for each SCSI HBA channel in the system. Each entry presents information about the adapter and transfer statistics for each discovered LUN.

A Configuring the HBA

This appendix describes how to configure the Q2300 HBA on Linux systems using the Configuration protocol Driver Configuration menu.

 **NOTE:** This process is for advanced users who want to customize the configuration of the Q2300 HBA and the connected devices.

This appendix includes:

- [Starting the Configuration protocol](#), page 29
- [Using the Driver Configuration menu](#), page 29

Starting the Configuration protocol

To configure the HBA on Linux, access the Configuration protocol as follows:

1. Use the `fibreutils` RPM package to obtain `efiutil` (`efiutil.efi`) and the auxiliary driver, `efiaux.drv` as described in ["Installing the fibreutils RPM"](#) on page 21.
2. Power-on the server to the EFI shell.
3. Start `efiutil` as follows (`efiaux.drv` is automatically loaded if it is needed):
 - a. Set the drive to the boot device (for example, `fs1:`).
 - b. Change to the directory containing `efiutil`. For example, enter:

```
cd efi\qla2300
```
 - c. Run `efiutil`:

```
efiutil.efi
```

Enter `help` at any time for information about commands.
 - d. Select the HBA channel that you want to configure by selecting **adapter**.
 - e. Select **configure**.
4. Configure the HBA's NVRAM by selecting the menu items for the parameters to be changed as described in ["Using the Driver Configuration menu"](#) on page 29
5. Write the new configuration to NVRAM.
6. Exit the utility (select `quit`).
7. Reboot the system.

Using the Driver Configuration menu

This section describes the Configuration protocol's Driver Configuration menu. The menu contains the following sections and functions:

- NVRAM—Modify settings that are stored in the HBA's NVRAM.
- Information—View device, HBA, and Help information.
- Operation—Write or discard NVRAM data and exit the Configuration protocol.

The following example shows the Driver Configuration menu.

Main Menu

NVRAM Parameters

1. Edit Adapter Settings
2. Edit Advanced Settings
3. Edit Database
4. Edit Boot Settings

Information

5. Show Database
6. Show Translation
7. Show NVRAM Buffer
8. Info

9. Help

Operation

10. Abandon
11. Write
12. Quit

Table 5 describes the Driver Configuration components.

Table 5 Driver Configuration menu components

Menu Option	Description
NVRAM Parameters	
1. Edit Adapter Settings	Displays the Edit Adapter Settings menu.
2. Edit Advanced Settings	Displays the Edit Advanced Settings menu.
3. Edit Database	Displays the Edit Database screen.
4. Edit Boot Settings	Displays the Edit Boot Settings menu.
Information	
5. Show Database	Displays the contents of the WWN database in table form.
6. Show Translation	<p>Displays the SCSI target id translation table. This table is a list of SCSI tid and fibre channel loop id mapping pairs. Each entry in the table consists of the following for each device:</p> <ul style="list-style-type: none"> • SCSI id (tid) • Fibre channel loop id (lid) • World wide port name (WWPN) • World wide node name (WWNN) <p>All numbers are in hexadecimal. Tid values from 0x00 to 0x0A are persistent, and tid values greater than 0x0A are assigned sequentially as devices are discovered. Tid values greater than 0x80 are fabric-attached while those below 0x7F are arbitrated-loop-attached.</p>
7. Show NVRAM Buffer	Displays the contents of the local NVRAM buffer in hexadecimal. This is the local buffer containing changes made prior to using the Write selection to commit them to the HBA's NVRAM.
8. Info	<p>Displays the following HBA information:</p> <ul style="list-style-type: none"> • EFI device path • Port WWPN • Serial number • SSVID and SSDID from NVRAM <p>Use the device path to determine which HBA configuration is displayed.</p>
9. Help	Displays a brief description of the menu selections.

Table 5 Driver Configuration menu components (continued)

Menu Option	Description
Information	
10. Abandon	Abandons the changes in the current Configuration protocol local buffer and reloads its contents from the HBA's NVRAM.
11. Write	Writes the current Configuration protocol local buffer to the HBA's NVRAM. Use this function any time you use a menu selection to modify configuration data. When the NVRAM has been successfully written, the Configuration protocol local buffer is reloaded from the HBA's NVRAM.
12. Quit	Quits the Configuration protocol and returns to the EFI shell. You must use the Write selection to write any changes to the HBA's NVRAM before quitting.

B Regulatory compliance and safety

Laser device

All HP systems equipped with a laser device comply with safety standards, including International Electrotechnical Commission (IEC) 825. With specific regard to the laser, the equipment complies with laser product performance standards set by government agencies as a Class 1 laser product. The product does not emit hazardous light.

Laser safety warning

-
- ⚠ **WARNING!** To reduce the risk of exposure to hazardous radiation:
- Do not try to open the laser device enclosure. There are no user-serviceable components inside.
 - Do not operate controls, make adjustments, or perform procedures to the laser device other than those specified herein.
 - Allow only HP authorized service technicians to repair the laser device.
-

Certification and classification information

This product contains a laser internal to the fiber optic (FO) transceiver for connection to the Fibre Channel communications port.

In the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in the Department of Health and Human Services (DHHS) regulation 21 CFR, Subchapter J. A label on the plastic FO transceiver housing indicates the certification.

Outside the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in IEC 825-1:1993 and EN 60825-1:1994, including Amendment 11:1996 and Amendment 2:2001.

Laser product label

The optional label in [Figure 2](#) or equivalent may be located on the surface of the HP-supplied laser device.



This optional label indicates that the product is classified as a CLASS 1 LASER PRODUCT. This label may appear on the laser device installed in your product.

Figure 2 Class 1 laser product label

International notices and statements

Canadian notice (avis Canadien)

Class A equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union notice

Products bearing the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community and if this product has telecommunication functionality, the R&TTE Directive (1999/5/EC).

Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards and regulations):

- EN55022 (CISPR 22) - Electromagnetic Interference
- EN55024 (IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-6, IEC61000-4-8, IEC61000-4-11) - Electromagnetic Immunity

- Power Quality:
 - EN61000-3-2 (IEC61000-3-2) - Power Line Harmonics
 - EN61000-3-3 (IEC61000-3-3) - Power Line Flicker
- EN60950 (IEC60950) - Product Safety
- Also approved under UL 60950/CSA C22.2 No. 60950-00, Safety of Information Technology Equipment.

BSMI notice

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Japanese notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Korean notices

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약 잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든지역에서 사용할 수 있습니다.

Safety

Electrostatic discharge

To prevent damage to the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

Preventing electrostatic damage

To prevent electrostatic damage, observe the following precautions:


- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly (see "[Grounding methods](#)" on page 37).

Grounding methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm (± 10 percent) resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an HP authorized reseller install the part.

 **NOTE:** For more information on static electricity, or assistance with product installation, contact your HP authorized reseller.

Index

A

audience 5
authorized reseller, HP 7

B

boot drive, installing Linux drivers on 24
BSMI, regulatory compliance notice 35

C

certification and classification information, laser 33
Class A equipment, Canadian compliance statement 34
Configuration protocol
 starting on Linux 29
configuring HBAs on Linux 29
conventions
 document 6
 text symbols 6

D

document, conventions 6
documentation, HP web site 5
drivers
 building for Linux 22
 building multiprocessor on Linux 23
 building uniprocessor on Linux 22
 changing parameters on Linux 21
 efiaux.drv 29
 installing from RPM 20
 installing on Linux boot drive 24
 manually loading on Linux 26
 qla2x00 19

E

EFI driver, updating on Linux 17
efiaux.drv 29
EFIUTIL 18
efiutil.efi 29
electrostatic damage prevention 36

environmental specifications 10
ESD (electrostatic discharge) 36
European Union, regulatory compliance notice 34

F

features
 complies with 10
 Fabric Loop Attach (FLA) 10
 Fibre Channel Protocol Manager (FPM) 10
 Fibre Channel Protocol-SCSI 10
 Private Loop Direct Attach (PLDA) 10
fibretails 18, 21
fibretails RPM 29

G

gcc compiler 20, 21
German noise declaration 36
grounding methods 37

H

HBAs
 configuring on Linux 29
 EFI driver
 Linux 17
 environmental specifications 10
 installation prerequisites 13
 installing 16
 jumper 15
 Linux Configuration protocol 29
 performance specifications 10
 physical specifications 11
help, obtaining 7
HP
 authorized reseller 7
 driver RPM 21
 storage web site 7
 Subscriber's choice web site 7
 technical support 7

I

IEC EMC, worldwide regulatory compliance notice [34](#)

installing

HBAAs [16](#)

Linux driver on boot drive [24](#)

prerequisites [13](#)

RPM [20](#)

J

Japan, regulatory compliance notice [35](#)

jumpers [15](#)

K

Korean, regulatory compliance notice [36](#)

L

label, laser [33](#)

laser

international certification and classification

information [33](#)

product label [33](#)

radiation, warning [33](#)

Linux

.gz file [20](#)

building a driver from the sources [21](#)

changing driver parameters [21](#)

configuring HBAAs [29](#)

EFIUTIL [18](#)

fibertools [18](#), [21](#)

gcc compiler [20](#), [21](#)

loading the driver [24](#)

manually installing driver on boot drive [24](#)

manually loading drivers [26](#)

RISC firmware [17](#)

RPM [20](#)

set_parm script [21](#)

starting the Configuration protocol [29](#)

N

noise declaration, German [36](#)

P

parameters, Linux drivers [21](#)

PCI-X bus slots

master [16](#)

slave [16](#)

preventing electrostatic damage [36](#)

Q

qla2x00 drivers [19](#)

R

Red Hat

building a Ramdisk image [25](#)

building drivers [22](#)

regulatory compliance

notices

BSMI [35](#)

European Union [34](#)

IEC EMC statement, worldwide [34](#)

Japan [35](#)

Korean [36](#)

related documentation [5](#)

RISC firmware, upgrading [17](#)

RPM

building a multiprocessor driver [23](#)

building a uniprocessor driver [22](#)

fibertools [21](#), [29](#)

HP driver [21](#)

installing [20](#)

uninstalling [20](#)

upgrading [20](#)

S

set_parm script [21](#)

specifications

environmental [10](#)

performance [10](#)

physical [11](#)

Subscriber's choice, HP [7](#)

SUSE SLES, building drivers [22](#)

symbols in text [6](#)

T

technical support, HP 7

text symbols 6

U

uninstalling the RPM 20

updating, Linux EFI driver 17

upgrading

 RISC firmware 17

 RPM 20

W

warnings, lasers, radiation 33

web sites

 HP documentation 5

 HP storage 7

 HP Subscriber's choice 7

